


YOUR LASER POINTER DEFENSE

LaseReflect®



NEW! Green + NIR LaseReflect® Aviator HD Glasses! \$219

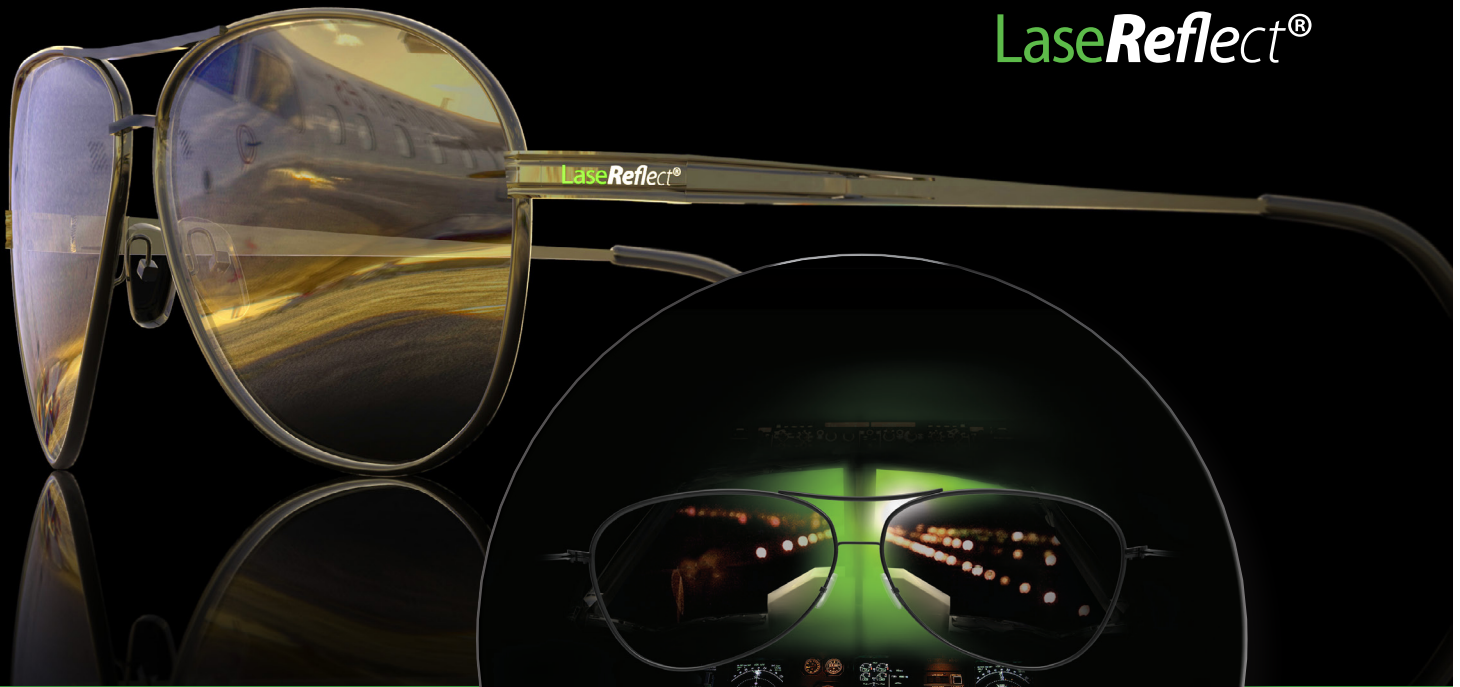

IRIDIAN

SPECTRAL TECHNOLOGIES

Transportation operators, such as pilots or train conductors and law enforcement personnel often come under attack by commonly available laser pointers. The glare associated with these attacks can cause dangerous distraction or, in some instances, temporary blindness. The FAA reported 7,700 incidents in 2015, nearly double those in 2014. More than 94% of strikes came from green (532 nm) lasers in 2014.

Leveraging our industry-leading optical coating technologies on plastics, Iridian Spectral Technologies has recently introduced Laser Reflection Glasses, LaseReflect®, to address these needs. Our multi-layer dielectric thin-film solutions provide high transmittance with deep, narrow blocking to maximize laser reflection while minimizing the impact on light levels and colour discrimination for the remainder of the visible spectral region.

These glasses are designed to provide high transmission between the reflected bands, including in the NIR which allows use in low-light conditions and can be compatible with night-vision systems. The 1064nm (NIR) blocking provides protection from the high power 1064nm light emitted from green lasers that have been designed without a NIR filter (common in cheap, readily available laser pointers). This invisible 1064nm laser wavelength can be hazardous to vision if an operator is exposed.



IRIDIAN
SPECTRAL TECHNOLOGIES

Buy online at www.iridian.ca/LaseReflect

Iridian Spectral Technologies Ltd. 2700 Swansea Crescent, Ottawa, ON K1G 6R8
Tel: 613-741-4513 | Fax: 613-741-9986 | E-mail: inquiries@iridian.ca | www.iridian.ca




LaseReflect®

LRG13 Aviator HD glasses provide:

- **Green** blocking (532 nm)
- Near-IR blocking (1064 nm)
- Blocking >99% (over 0 to 20 degrees field of view)
- UVA and UVB blocking
- Transmittance average >70%
- High quality glass lenses for highest optical clarity

LaseReflect®

LRG13 Glasses:532-1064

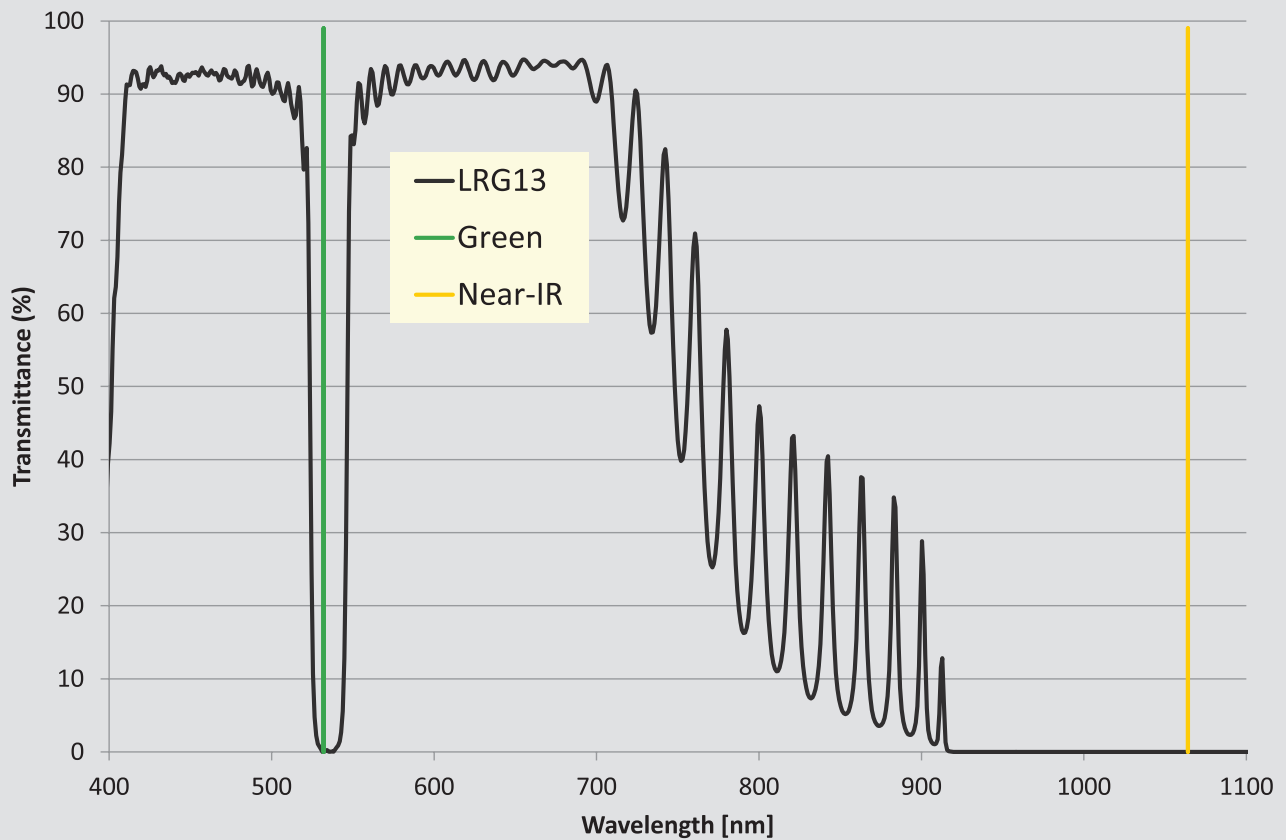

Iridian Spectral Technologies Ltd (Iridian) is a diversified optical filter manufacturer that is an international leader in filter design and manufacture especially for application in the fields of fiber optic communications, optical spectroscopy, 3D entertainment, and in aerospace. Iridian is a global supplier with distributors in many countries.



Follow us on Twitter @IridianSpectral



IRIDIAN
SPECTRAL TECHNOLOGIES

THE LEADER IN OPTICAL FILTER SOLUTIONS

Iridian Spectral Technologies Ltd. 2700 Swansea Crescent, Ottawa, ON K1G 6R8
Tel: 613-741-4513 | Fax: 613-741-9986 | E-mail: inquiries@iridian.ca | www.iridian.ca